



7526 S. State Street, Midvale, UT 84047
800.657.6394 - mail@sugarhousebanners.com

Set-up and take-down for X-Style banner stands

If you see any problems with your banner stand unit that seem unordinary please call us before proceeding as to not incur further damage to your banner stand unit.

X-style Set-up:


1. Remove banner stand from the carrying case.
2. Locate the 3rd leg and set aside.
3. The two short legs on the X-style banner stand model are the top legs. Extend the two short legs into the up position.
4. The two long legs on the X-style banner stand model are the bottom support legs. Extend the two long legs into the down position.
5. The 3rd leg slides into the cylinder on the front side of the hub on the X-style banner stand model. *(Photo A.)*
6. Once desired height has been reached for the 3rd leg turn the screw on the cylinder to tighten, holding the 3rd leg into place. This causes the 3rd leg to angle from the front side of the X-style banner stand model towards the back. Place it in your desired display location.
7. Make sure all hooks (if applicable for your model) are facing forward and tightened into place. (the most common problem with this stand is having it setup backwards. Make sure the stand is facing the correct direction. *(Photo B.)*
 - a. For a standard size of 59"x27" graphic the hooks should be tightened into place at the farthest end of the legs. For smaller sized graphics adjust accordingly.
8. Unroll graphic and find the 4 grommets located in the corners.
9. Attach graphic to the top hooks first by placing the top hooks through the grommets on the graphic. *(Photo C.)*
10. Carefully pull graphic down so the bottom graphics can attach to the bottom hooks. This should cause bowed tension on the 4 legs of the X-style banner stand holding the graphic firmly in place.
11. Your X-style banner stand with graphic is now in display mode. *(Photo D.)*



A.



B.

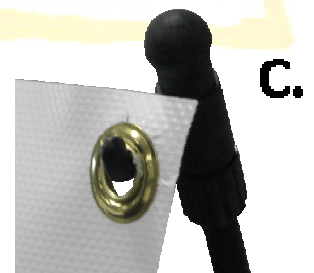

C.



D.



7526 S. State Street, Midvale, UT 84047
800.657.6394 - mail@sugarhousebanners.com

X-Style take-down:

1. Remove the graphic from the bottom two hooks, releasing the bowed tension on the 4 legs.
2. Remove the graphic from the top two hooks.
3. Roll up graphic and set aside.
4. Turn screw on center hub to release the 3rd leg.
5. Pull 3rd leg out and set aside.
6. Bend all four legs forward so they are in the down position.
7. Place X-style banner stand with 3rd leg back into the carrying case for travel or storage.

